

TROUBLE SHOOTING for CEL 【LANCER EVOLUTION X (CZ4A 5M/T, TC-SST) 】

- HKS has been conducting analysis on Lancer Evolution X for product development.
- The following symptoms have been found during product development.
- See the following countermeasures when your vehicle have any symptom.

* The symptoms described above were found during product development. There may be different symptoms.

* The countermeasure may not work for all vehicles.

■ TROUBLESHOOTING for CEL 【LANCER EVOLUTION X (CZ4A 5M/T, TC-SST) 】

WARNING LAMP		INFORMATION MONITOR	SYMPTOM	MEASURES	REMARKS
ENGINE	ASC-OFF	CALL DEALER			
ON	ON	ON	Those warning lights come on during driving, but there is no problem for driving.	Turn the ignition off and wait for 10 seconds. Re-start the engine. If the lights does not go off after re-starting the engine, contact your dealer for inspection.	There is no specific condition to turn on the CEL.
ON	ON	ON	Those warning lights come on during driving. The car bucks.	Turn the ignition off and wait for 10 seconds. Re-start the engine. After re-start the engine, ● Only engine CEL comes on → There won't be any problem for driving. ● Go to the dealer to turn off the warning lights. No change. → Remove VAC, contact the purchase store or HKS dealer. → If VAC is not installed, contact your dealer for inspection.	
ON	ON		Engine does not start after installing VAC. (No cranking.)	Check the points where the wires are connected. Make sure the wires are connected properly.	Proper re-wiring may turn the lights off.
ON		ON	● Unstable idling. Hunting occurs between 800~1500rpm. ● Even under acceleration, the engine does not run by fuel-cut. ● Throttle does not move.	Disconnect the battery more than 5 minutes. After re-start the engine, if the warning lights does not go off, contact the dealer for inspection.	
ON		ON	After increasing the boost to 160kPa at the maximum, the CEL and "Contact Dealer" come on under half-throttle.	If EVC5 is installed, using the throttle correction can avoid the warning light from coming of. For more details, contact the purchase store or HKS dealer.	
ON			Reverse gear cannot be shifted easily. The CEL comes on when shifting to the reverse gear.	Contact your dealer for inspection.	
ON at times			Shifting gears does not perform properly. Sometimes, a gear cannot be shifted.	Contact your dealer for inspection.	