



INSTRUCTION MANUAL NISSAN FAIRLADY Z [RZ34]

E05253-N22030-00 February 2025 Ver.3-1.01

1. INTRODUCTION

Thank you for your purchase of Power Editor R harness.

- This manual indicates items that require attention in order to install this product safely and lists precautions to avoid any possible damage and/or
- This product was designed based on installation onto a specific factory vehicle or a vehicle using other HKS products. The performance and/or safety cannot be guaranteed if this product was installed onto other inapplicable vehicles.
- Contact HKS dealer for any lost parts, replacement, and this manual.
- HKS will not be responsible for any damage caused by incorrect installation and/or use of this product.
- This product works only with a vehicle with the vehicles listed in the table below.
- The specifications of this product are subject to be changed without notice.
- This manual is subject to be revised without notice.

Product	Power Editor R harness NR-1		
Code Number	42999-AN002		
Use	Boost up of turbocharged vehicle		
Application	NISSAN FAIRLADY Z [RZ34]		

2. Safety Precaution

The following pr ecautions for use of this product are to prevent possible accidents and/or injuries and for proper use.

↑ WARNING: Indicates risk of serious injury and/or possible death.

CAUTION: Indicates risk of serious injury or property damage.

⚠ WARNING

- Make sure to work on the vehicle in a well-ventilated area to prevent possible explosion or a fire.
- Make sure to hold connectors when removing them to avoid possible damage to other electronics parts and/or a fire caused by disconnection or a short circuit.
- Stop using the product if any unusual situation is noticed. Consult the dealer immediately. Failure to do so may cause an electric shock, burn out, or damage to the vehicle.
- Make sure to work on the vehicle in area where a vehicle can be parked safely.


⚠ CAUTION

- Do not install this product by yourself.
- Do not modify, disassemble, and/or remodel the product and attached parts to avoid any damage to the unit and/or harness.
- To avoid possible malfunction and damage to the engine, install the unit away from excessive heat or water/moisture.
- Make sure all connections and wiring are not disconnected, short circuited. or incorrect. If so, it may cause an electric shock, burn out, or damage to the vehicle.
- If any unusual noise, scents, and/or vibrations are noticed, consult the dealer immediately.
- If any unusual noises, scents, and/or vibrations are noticed while driving, please take appropriate action according to the user manual.
- Before using this product, please check the following.
- The ECU installed in the vehicle is a genuine manufacturer's product. The ECU data is normal.
- Desorption of the connector, please go always hold the connector.
- If you pull the cable, there is a possibility of disconnection.
- Before an automobile inspection and/or repair, it is necessary to remove this product.
- Daily maintenance on the vehicle is the responsibility of the owner.

3. Product Features


- You can increase the boost pressure by attaching this product and writing the data that is compatible with your vehicle into the Power Editor R unit.
- Even after installing this product, you can return to the normal state by connecting the "return connector" instead of the Power Editor R ma in unit.

4. Parts List

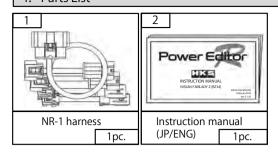


5. Harness specifications and map data settings


The terminals on the connector on the Power Editor R main unit (right image) of this product are wired as shown in the table below. Set the settings and parameters for each channel of the map data as shown below.

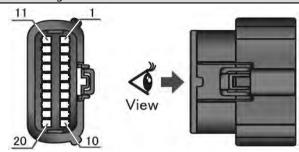

Power Editor R main unit connector

Pin	Wiring destination (function)	Pin	Wiring destination (function)
1	Boost pressure sensor B2 (power supply)	11	Boost pressure sensor B2 (GND)
2	Boost pressure signal B1 (sensor side)	12	Boost pressure signal B1(ECU side)
3	Boost pressure signal B2 (sensor side)	13	Boost pressure signal B2 (ECU side)
4	Fuel pressure signal (sensor side)	14	Fuel pressure signal (ECU side)
5	Throttle position signal B2(sensor+ECU side)	15	– (Waterproof plug)
6	– (Waterproof plug)	16	– (Waterproof plug)
7	– (Waterproof plug)	17	– (Waterproof plug)
8	Exhaust cam angle B2 signal	18	– (Waterproof plug)
9	USB D —	19	USB D+
10	USB 5V	20	USB GND

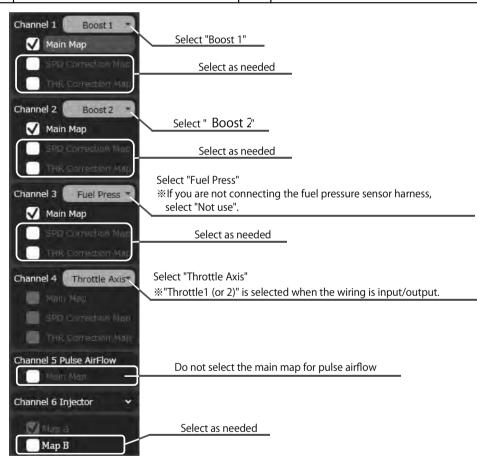

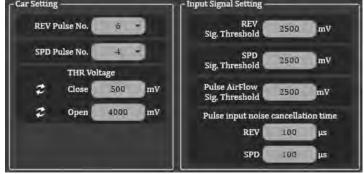


Parameter Settings

- 1 -- 2 -

6. Harness installation

- ① Turn off the vehicle's engine and remove the cable terminal from the negative terminal of the battery after leaving it for at least 10 minutes. Depending on the condition of the vehicle, it may be necessary to leave it for 10 minutes or more. Please leave it for an appropriate period of time.
- ② Install the Power Editor R in a place that is not subject to high temperatures or direct water. If you use double-sided tape to attach the unit, clean the surface and degrease it thoroughly before attaching it, and use a tie-wrap to secure it in place. If you use only double-sided tape to attach the unit, it may come off due to aging, which can be dangerous.
- ③ Connect the harnesses to each sensor in the HR-1 harness. Refer to the label affixed to each sensor and the diagram below, and connect each sensor so that it fits into the original harness.
 - * When connecting the connector, make sure it is securely locked.
 - ※ If you are not making fuel pressure corrections, there is no need to connect
 the harness (FP label) to the fuel pressure sensor. Connect the male and
 female connectors of the FP harness to serve as insulation.
- 4 Connect the NR-1 harness to the Power Editor R main unit.
- ⑤ To prevent the harness from moving due to vibration, secure it in place using the tie-wraps included with the Power Editor R unit.
- ⑥ After checking that all connectors are connected correctly, attach the cable terminal to the negative battery terminal.

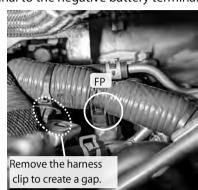










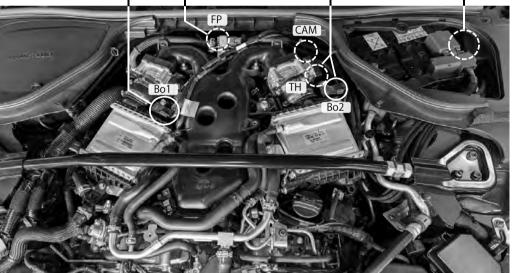

7. Writing data to the Power Editor R

- ① Remove the waterproof connector attached to this product, attach the USB harness included with the Power Editor R main unit, and connect it to your computer.
- ② Write the map data created using "Easy Writer for Power Editor R".
 - * Please download and use the latest version from the HKS website.
 - After completing the setup and removing the USB harness, connect the waterproof connector or the map switch harness.



8. Maintenance

♠ WARNING

Do not use this product if unusual occurrences should occur to avoid risk of electrical shock and/or fire.

Consult with the dealer immediately.

⚠ CAUTION

- Do not try to repair the product yourself. Consult with your dealer.
- If any unusual noises, scents, and/or vibrations are noticed while driving, please refer to a factory repair manual.

9. Repair Service

For questions about this product, any optional, lost, defective and/or damaged parts, please contact your dealer.

10. Revision of Manual

Rev. Number	Date	Details
3-1.01	2025/2	1st Edition