



## INSTALLATION SUPPLEMENT

### Hi-Power Exhaust

### MITSUBISHI EVO


Part No: 31008-BM001

V112108

#### NOTICE

It is necessary to remove the rear tow hook to allow for proper muffler clearance. Please follow the tow hook removal instructions below.

1. Gently squeeze the black connector ends and pull back to remove the connector from the canister fitting.
2. Gently pull out the green tabs on the connector and pull-up until the connector can be pulled back and removed from the canister fitting.

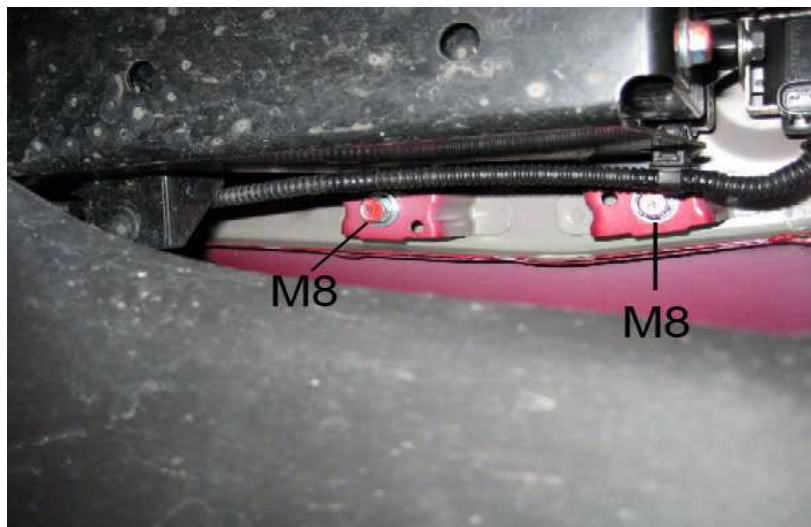


3. Remove 3 x M8 bolts from the canister mounting bracket. Note: Do not remove the canister because the solenoid harness is secured to the canister mounting bracket.

4. Remove the rubber hose from the plastic vent and move the canister assembly aside.



5. Remove 2 x M12 bolts from the inner side of the tow hook.
6. Remove the push-tab that connects the bumper skin to the tow hook.
7. Remove 2 x M10 bolts from the bottom of the tow hook and remove the tow hook.
8. Reinstall the canister in reverse order.

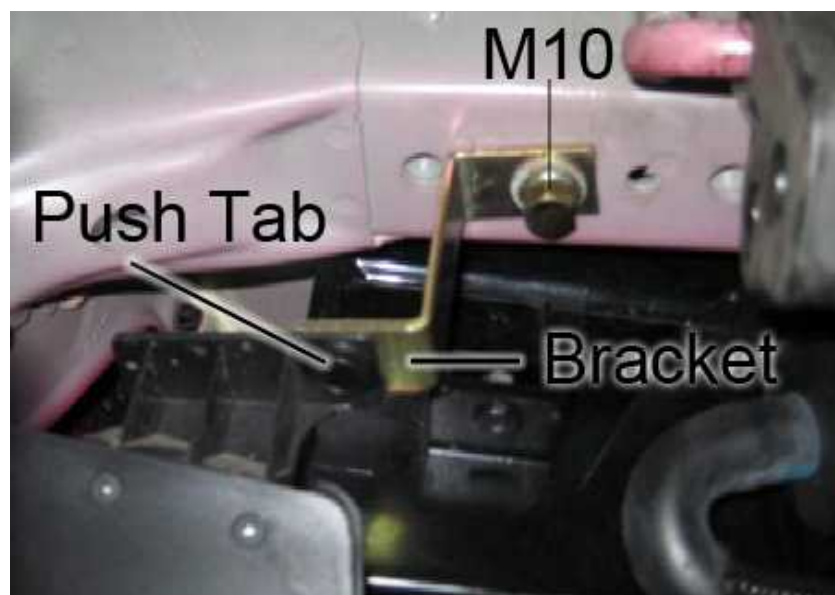

9. Install the bumper skin bracket (using the existing hole) with the supplied M10 bolt/lock washer/plate washer to the bumper skin reusing the stock push tab.