



## INSTALLATION SUPPLEMENT

### **Dual Hi-Power Ti Exhaust**

**2010 370Z (Z34)**

Part No: 32009-BN004


V011910

#### **NOTICE**

This manual assumes that you have and know how to use the tools and equipment necessary to safely perform service operations on your vehicle. This manual assumes that you are familiar with typical automotive systems and basic service and repair procedures. Do not attempt to carry out the operations shown in this manual unless these assumptions are correct. Always have access to a factory repair manual. To avoid injury, follow the safety precautions contained in the factory repair manual.

**It is necessary to slightly modify or remove the factory EVAC (emissions canister) shield on all 370Z models. This would allow for proper right side muffler clearance. Removing the EVAC shield requires the removal of 3 x 10mm nuts (see diagram 1 below). If the shield is removed, nut #3 will be reused.**

**Diagram 1**

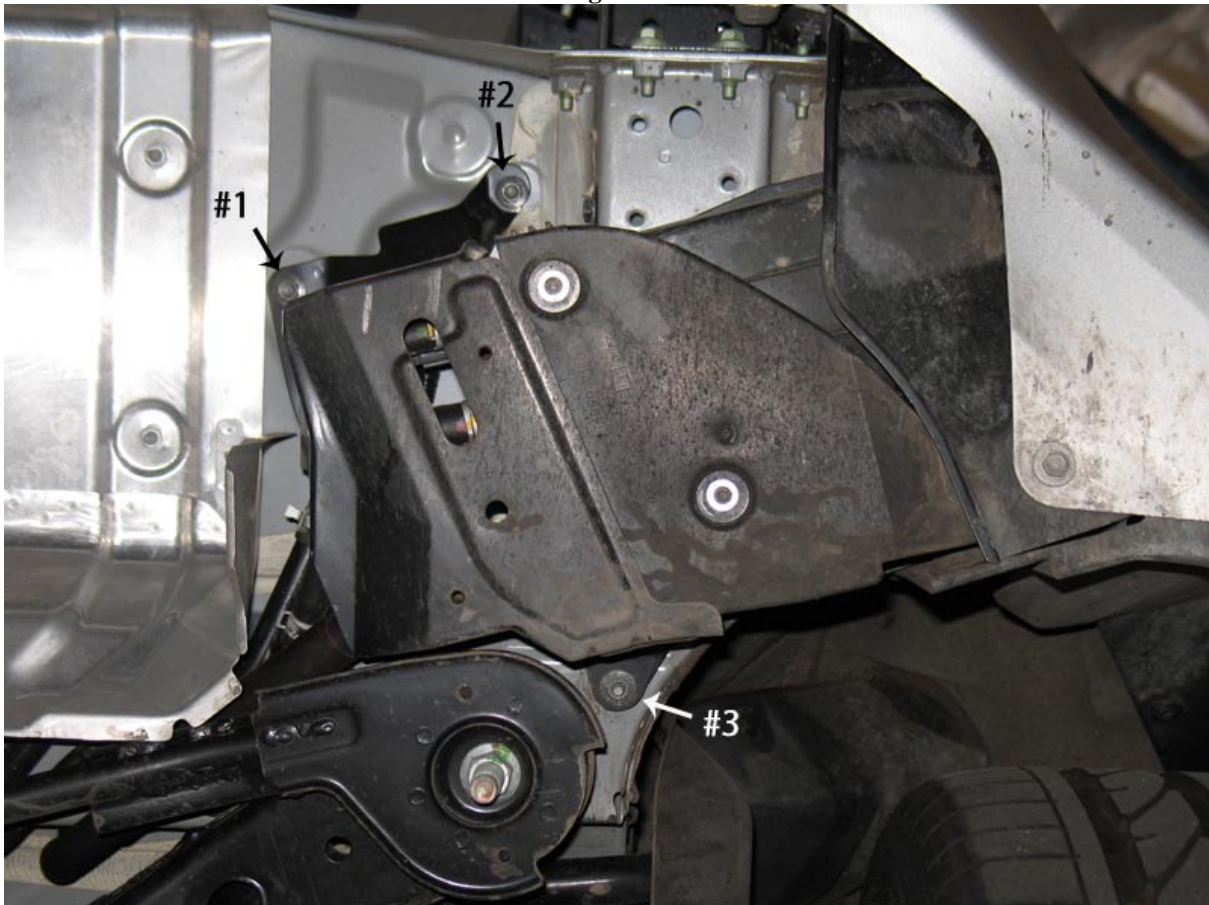

2010 Nismo models require removal of the left side rubber mount extension bracket for proper left side muffler alignment (see diagrams 2 & 3 below). Remounting of the rubber mount requires an additional M8x1.25 L=45mm bolt and flat washer (not included with this exhaust).

**Diagram 2 (Before)**



**Diagram 3 (After)**

